
W A R N I N G

*This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer.
The entire manual should be carefully read.*

Instruction Manual *Code Changes*



PC1555MX

Ready

Armed

System

Zone 1

Zone 2

Zone 3

Zone 4

Zone 5

Zone 6

Zone 7

Zone 8



1 2 3

4 5 6

7 8 9
* 0 #

P
A
F

1
2
3
4
5
6
7
8

ZONE BYPASSING: Press [*] [1] [Zone to be bypassed]. Press [#] to return to "Ready". Arm the system.

PROGRAMMING USER CODES: Press [*] [5] [Master Code] [1 to 32 for user code number]. Enter four digits. Press [#] to return to "Ready".

INSTANT ARM: Press [*] [9] [User

P
A
F
NOT
IN
USE
NOT
IN
USE
NOT
IN
USE

TEST SYSTEM WEEKLY



Access Codes

Access Codes are used to arm and disarm the system. There are 33 access codes available: one Master Code and 32 access codes.

Only the Master Code can be used to program additional security codes and to change other system features as well as to arm and disarm the security system. The Master Code will be supplied to you by your installer. All keypad entries are made by pressing one key at a time.

Programming Security Codes

Programming codes from an LED Keypad:

The Master Code

To program the Master Code, enter [*][5][current Master Code][40][new Master Code]. The Master Code must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. Press [#] 3 times to return to the Ready state.

Additional Codes

Up to 32 additional access codes (01 through 32) may be programmed.

To program a new code:

Enter [*][5][Master Code][code number 01 to 32][new access code]. The code number is a double digit from 01 to 32. Access codes must be four digits unless otherwise indicated by your installer.

Enter digits 0 through 9 only. Press [#] 3 times to return to the Ready state.

If an access code already exists for the code number you have selected, it will be replaced by the new code.

To erase a code:

Enter [*][5][Master Code][code number 01 to 32][*]. Press [#] 3 times to return to the Ready state. The Master code cannot be erased.

Programming codes from an LCD Keypad:

Master Code

Press the [*] key 5 master code

Press 40 to indicate that you wish to program the Master Code. The display will read existing code.

Enter the new Master Code. The Master Code must be four digits unless otherwise indicated by your installer.

Enter digits 0 through 9 only. Once the new code is entered, the keypad will beep 3 times and the display will read user 01

Press [#] 3 times to exit the code programming function.

Additional Access Codes

* 5 Master Code

Use the scroll keys (< >) to find the access code – indicated by "02P" to "32P" – you wish to add, change or delete. Press the [*] key to select the code you wish to alter. The display will read existing code.

To add or change a code, enter the new code. Access codes must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only. To delete an access code, enter [*].

The "P" means the code has been programmed. If there is no "P" then that code is deleted. Press [#] 3 times to exit the code programming function.