

# PC1616/PC1832/PC1864 v4.2 User Manual

*Code Changes*

**DSC®**


**PowerSeries™**

---


SECURITY SYSTEM

# PowerSeries System Keypads

**PC155RKZ**

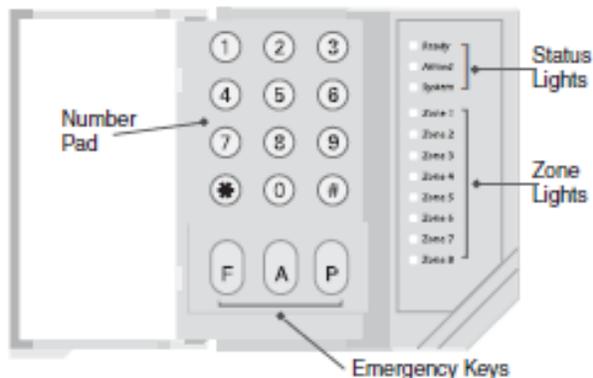


**PK5508/PK5516/RFK5508/RFK5516**

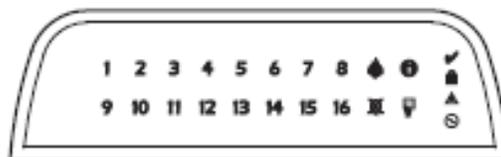


**PK5500/PK5501/RFK5500/RFK5501**



**LED5511**

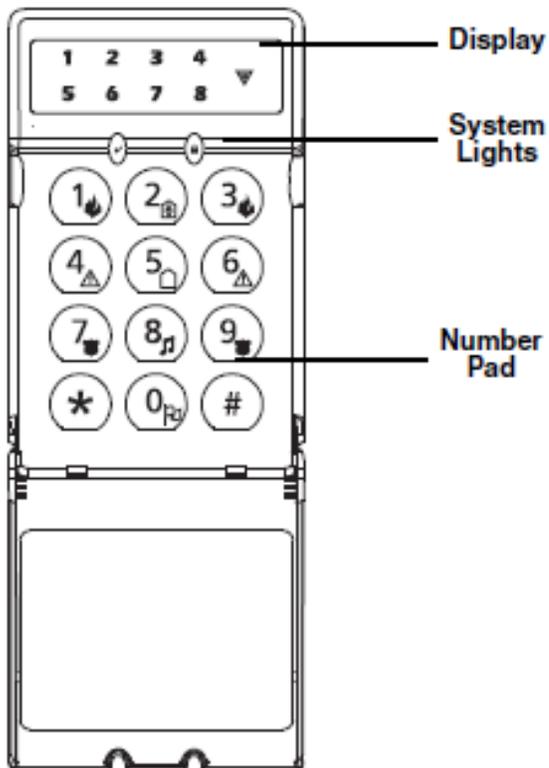

**LCD5511**

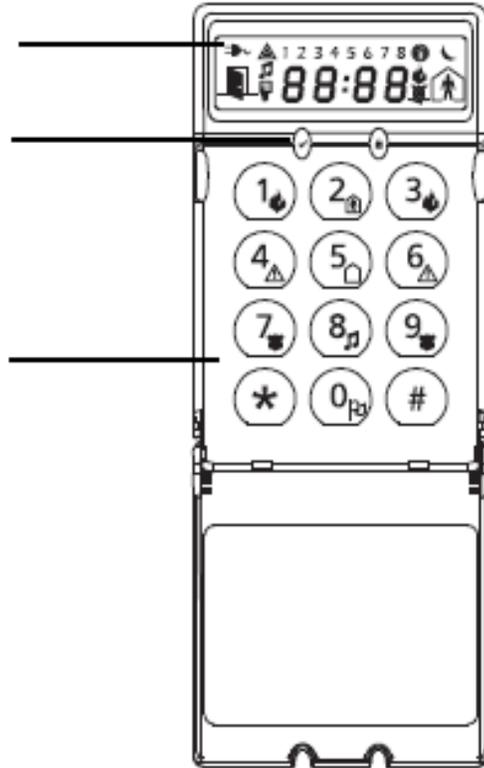

## **Access Code Programming**

---

In addition to the Master Access Code, you can program up to 94 additional User Access codes (access codes 1-48 for PC1616, access codes 1-72 for PC1832 and access codes 1-95 for PC1864).

Press \* 5 plus your Master Access Code. The Program or System indicator will begin to flash, and the Armed ( ) indicator will turn on.

Enter the 2-digit number to be programmed (i.e. 06 for user access code 6; enter 40 for the Master Access Code). When using the PK5500/RFK5500, use the < > keys to find the specific code and press \* to select. Enter the new 4 or 6-digit access code, or press \* to erase it. When programming is complete, enter another 2-digit code to program or press # 3 times to exit.

For systems using multiple partitions/areas, access codes can be assigned to specific or multiple partitions/areas. Please contact your alarm company for details.

### **Access Codes**

[\*][5][Master Code] (when disarmed)

The [\*][5] User's Programming command is used to program additional access codes.

User Codes - User Codes 1-48 are available for the PC1616. User Codes 01-72 are available for the PC1832. User Codes 1-95 are available for the PC1864.

Master Code (Access Code 40) - The Master Code can only be changed by the Installer, if programmed.